



Pullboy Z easy Blum



Einbaurahmen für Abfallsammler/ build-in frame for waste bins/ Cadre d'installation pour poubelles/ Marco para empotrar Recolector de residuos/
Verzonken frame Afvalbak

1

Bin Height mm	Bin Size in Litres	Min 'H' mm
350	10L	342
350	20L	342
430	26L	422
460	29L	452
530	32L	522
505	40L	497

H is the minimum height for the fixing point of the runners

Runners: first fixing point should be 37mm from the front edge of the cabinet to the centre of the 3rd hole.

2

Spacers: Only use for 16mm carcasses – not needed for 18/19mm.

X= 16mm 4x

X= 19mm 4x

See 1A & 1B on next page for lid support fitting

3

4x

4


Bin	h1	Door width (mm)				
		600	500	450	400	300
10L	293mm					
26L	373mm					
29L	403mm	392mm	292mm	242mm	192mm	119mm
32L	473mm					
40L	448mm					

4x

2x

Attach the frame to the runners using the bolts provided.
Then fix the frame to the door – and also use the Blum Tandembox door fixing brackets

1A

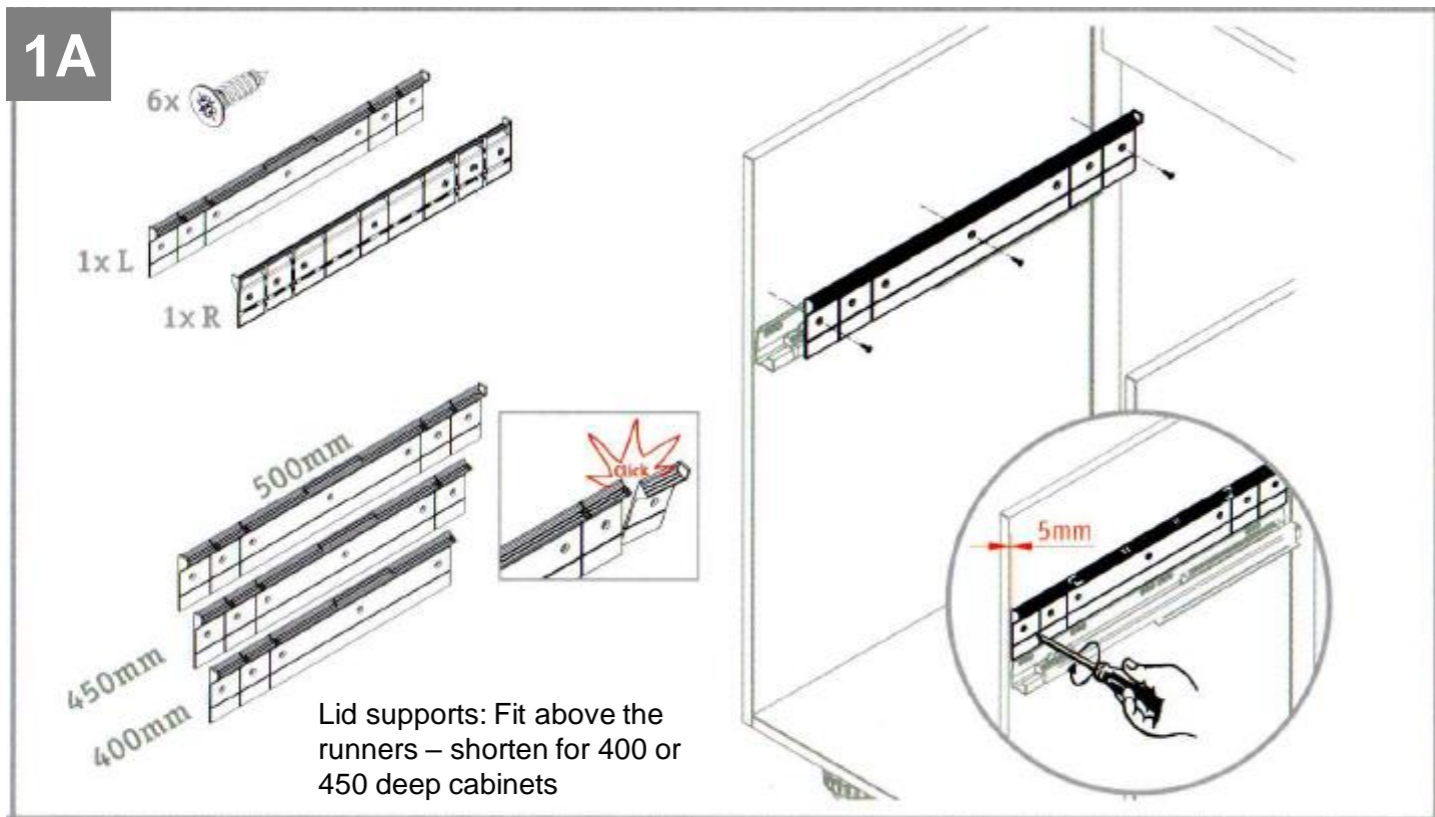

1B

